

HOW TO ORDER REPLACEMENT PARTS

PART ORDERS MUST CONTAIN:

1. Part Number and Description.
2. Chassis Number — found on a label on each chassis.
3. Model Number — found on the back, inside or bottom of cabinet.
4. If complete technical literature is desired, order:
94-4437 Technical Manual, Radio Chassis
94-4438 Technical Manual, Record Changer


WHERE TO ORDER:

Order from any Sears, Roebuck and Co.,
Retail or Catalog Order Store.


Prices are available upon application.

USED IN RADIO-PHONO MODELS:

3063 MEDITERRANEAN
3064 CONTEMPORARY

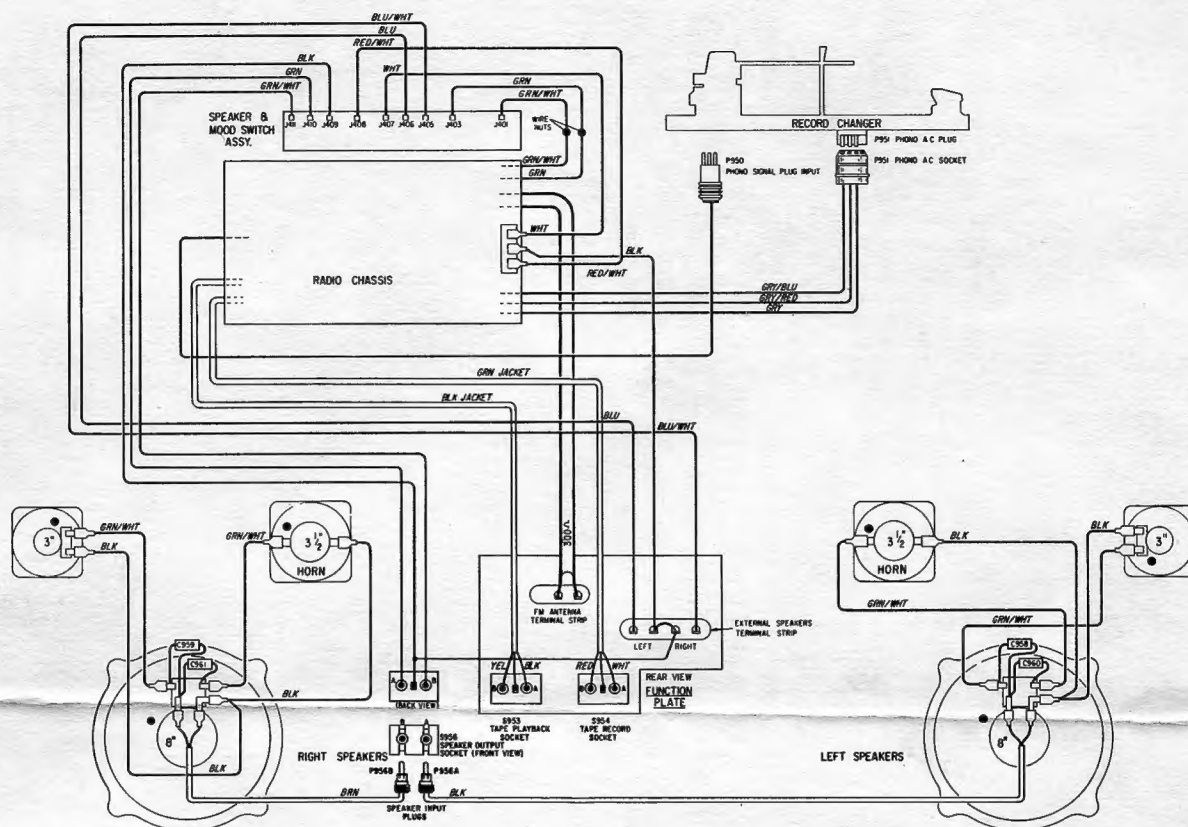


CABLE LAYOUT DIAGRAM

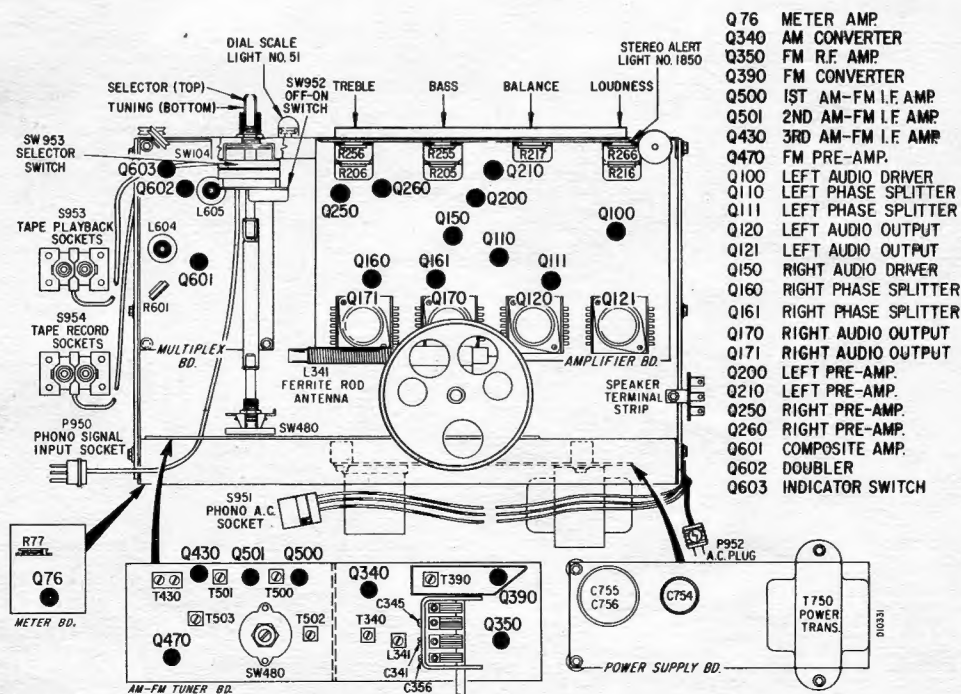

CHASSIS LAYOUT VIEW

CAUTION
IT IS GOOD SOUND SERVICE PRACTICE
WHEN REPLACING TRANSISTORS
COMPONENTS OR ATTACHING TEST
EQUIPMENT TO REMOVE ALL POWER
FROM THE UNIT UNDER TEST OR
REPAIR.

D103850

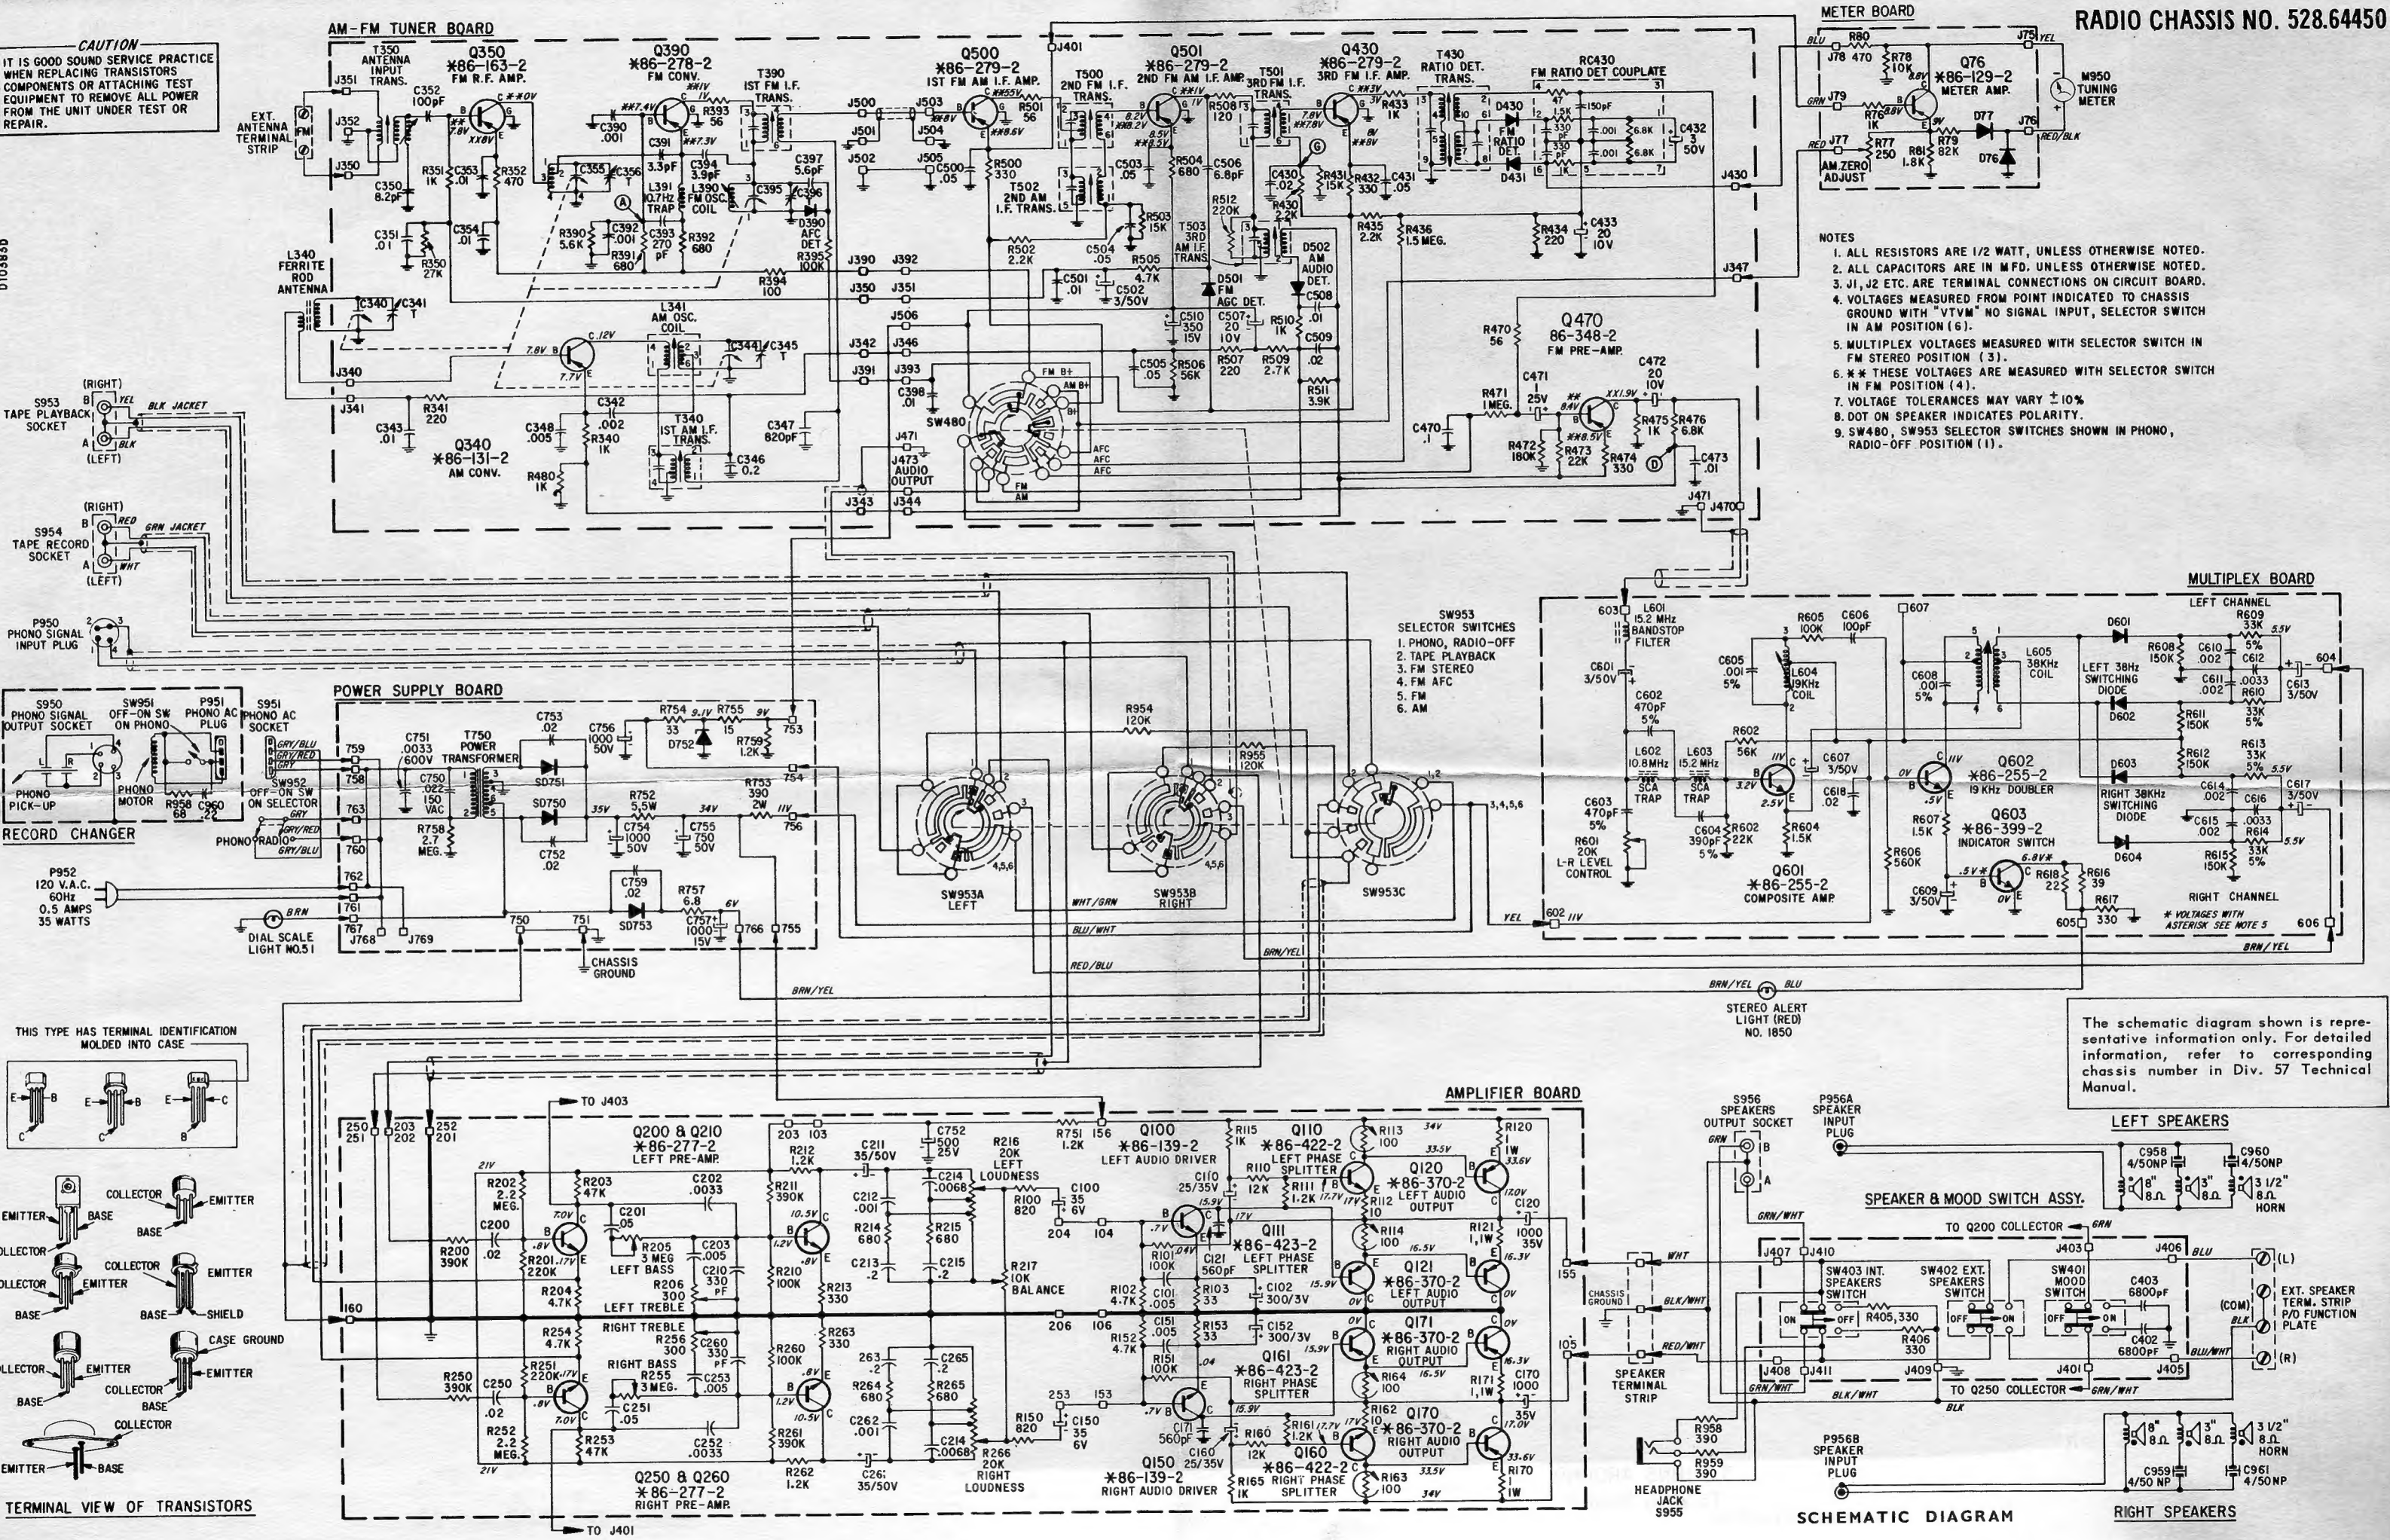

- NOTES**
1. ALL RESISTORS ARE 1/2 WATT, UNLESS OTHERWISE NOTED.
 2. ALL CAPACITORS ARE IN MFD. UNLESS OTHERWISE NOTED.
 3. J1, J2 ETC. ARE TERMINAL CONNECTIONS ON CIRCUIT BOARD.
 4. VOLTAGES MEASURED FROM POINT INDICATED TO CHASSIS GROUND WITH "VTVM" NO SIGNAL INPUT, SELECTOR SWITCH IN AM POSITION (6).
 5. MULTIPLEX VOLTAGES MEASURED WITH SELECTOR SWITCH IN FM STEREO POSITION (3).
 6. ** THESE VOLTAGES ARE MEASURED WITH SELECTOR SWITCH IN FM POSITION (4).
 7. VOLTAGE TOLERANCES MAY VARY $\pm 10\%$
 8. DOT ON SPEAKER INDICATES POLARITY.
 9. SW480, SW953 SELECTOR SWITCHES SHOWN IN PHONO, RADIO-OFF POSITION (1).

The schematic diagram shown is representative information only. For detailed information, refer to corresponding chassis number in Div. 57 Technical Manual.

SCHEMATIC DIAGRAM

RIGHT SPEAKERS

PARTS LIST

Part No.	Description
38-9126	Owners Manual
38-9127	Service Data Sheet
42-563-3	Cabinet, Mediterranean (3063)
42-564-3	Cabinet, Contemporary (3064)
50-1218-0	Rail, Top Trim (3063)
50-1235-9	Tambour Door, complete (3063)
21-2258-9	Tambour Door, complete (3064)
49-2455	Handle, Tambour Door (3063)
49-2434	Tambour Door (3064)
97-1348	Screw, Type 1 (#6x32x1/4") (mts. Tambour Door Handle)
58-285	Washer (mts. Tambour Door Handle)
40-820-2	Inlay (Radio Switch Panel)
67-1020-0	Dial Scale
48-119-2	Diffuser, Light
22-353-9	Tinnerman Clips
48-347-1	Window, Indicator Light
40-818-2	Inlay, Switch, finished
90-1003	Escutcheon, Molded
52-3166-0	Knob, Selector
52-3159-0	Knob, Tuning
52-3158-0	Knob (Loudness, Balance, Bass & Treble)
11-3554-9	Support, Shelf

Part No.	Description
33-706-4	Speaker, P.M., 3 1/2"
33-652-4	Speaker, P.M., 3"
33-655-4	Speaker, P.M., 8"
22-265-2	Palnut, Washer, Type #P-32 (for Speakers)
98-700-2	Grille Cloth (3064)
98-705-2	Grille Cloth (3063)
21-2263-0	Cover, Back, Bottom (3064)
21-2309-0	Cover, Back, Bottom (3063)
21-2262-0	Cover, Back, Center (3064)
21-2307-0	Cover, Back, Center (3063)
21-2350-0	Cover, Back, Top (3064)
21-2349-0	Cover, Back, Top (3063)
83-2082	Shelf, Adjustable (3063)
83-2083	Shelf, Adjustable (3064)

RECORD CHANGER

	Needle only (Sears Stock No. 57-8811D)
	Cartridge including Needle (Sears Stock No. 57-8893D)
39-198-0	45 RPM Spindle Adaptor
84-19076-1	Spindle Assembly
39-504-3	Manual Spindle

